



Gulf Stream 19' Bunkhouse Instructions

Turning Propane On and Off	2
Appliances	2
Stove Top	2
Microwave	3
Refrigerator	3
Heating/Cooling	4
Heater	4
Air Conditioner	4
Water Sources	5
Water Pump (city water connection instructions on next page)	5
City Water Connection	5
Water Heater	6
Additional Features	6
Lights	6
Power Outlets	6
USB Outlets	6
Awning	7
Checking the Tanks and Battery Levels	7

Turning Propane On and Off

1. When you arrive at your destination, turn the propane gas valve to the “Open” position. You can leave this open for the duration of the stay.
2. When leaving your destination, turn the propane gas valve to the “Closed” position, unless you are using gas to operate the refrigerator.



Appliances

Stove Top

1. The stove top runs on propane. To use the stove, follow the instructions below:
 - a. Ensure the gas valve of the propane tank is set to “Open”.
 - b. With a lighter or match ready, turn the dial on the stove to “HI”. This starts the flow of gas from the propane tank to the stove.
 - c. Carefully bring the flame from the lighter or match towards the stovetop until it ignites.
 - d. Choose desired cooking level.




Microwave

1. The microwave can run if the camper has an electric plug-in or a 2000w+ generator
2. If your campsite has an electric plug-in, the microwave will function just like your household microwave.
3. To run the microwave using a generator, follow the instructions below:
 - a. Plug the generator in using the exterior extension cord located in the front storage area of the camper.
 - b. Start the generator and Use the microwave just like your household microwave. Remember, it takes a 2000w+ generator to run the microwave

Refrigerator

1. The refrigerator can run on electricity or propane (GAS).
2. If your campsite has an electric plug-in (30 amp), plug in the camper, turn the refrigerator on by pressing the on/off button in, then set the refrigerator to "AUTO" by pressing the auto/gas button in.
3. If you do not have access to electricity, ensure the propane is set to open, turn the refrigerator on by pressing the on/off button in, then set the refrigerator to "GAS" by pressing the auto/gas button out.
4. Refrigerator will attempt to light for 45 seconds. If attempt is failed, it will wait 2 minutes then try again. This will happen 3 times. If total attempt is failed, then the "CHECK" light will come on. Please turn off, check to ensure the propane is turned on, then turn the fridge on again and the cycle will start over.
5. Temperature is controlled by a plastic thermometer connected to the last aluminum fin on the back of the refrigerator. Move it up for cooler and down for warmer. Recommended placement is 2/3 of the way up the aluminum fin.

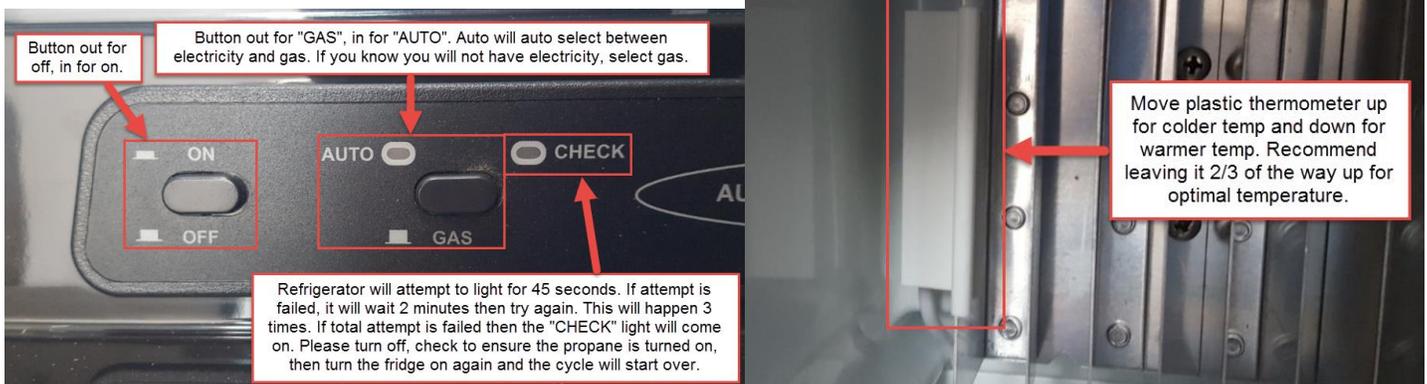

Heating/Cooling

Heater

1. The heater runs on propane and the batteries. Follow the instructions below to work the heater:
 - a. Please ensure the heater is turned off while camper is in transit.
 - b. Ensure the gas valve of the propane tank is set to "Open".
 - c. Select your desired temperature using the plastic rod on the bottom of the thermostat located in the camper by the bunk beds.
 - d. Turn the thermostat on by moving the plastic rod on the top of the thermostat to the LEFT.
 - e. **If the burner fails to light, the fan will still run, but only blow cold air. Turn the thermostat off, ensure propane is flowing, then turn the thermostat back on.**



Air Conditioner

1. The air conditioner can run if the camper has a 30 amp electric plug-in or a 3500+ watt generator(s).
2. If your campsite has a 30 amp electric plug-in, use the knobs on the AC unit to select your cool, fan, and temp settings.
3. If your campsite does not have an electric plug-in, follow the instructions below to control the AC unit using a 3500+ watt generator(s).
 - a. Plug the generator(s) in using the exterior extension cord located in the front storage area of the camper.
 - b. Start the generator(s). If using a rented generator(s) please follow generator starting instructions in the YouTube video.
 - c. Use the knobs on the AC unit to select your cool, fan, and temp settings.

Water Sources

Water Pump (city water connection instructions on next page)

The camper has a 30 gallon freshwater tank that provides water for the kitchen sink, toilet, and shower. Before using any of these features simply turn the water pump on. The switch is located on the control panel by the camper door. Water pump switch will illuminate when on. The water pump is powered by the batteries or electricity if plugged in.

Please be sure to turn the water pump on, use the water you need, then turn the water pump off once you finish using any of the water features. Please note that it is normal for the water pump to make sounds when it is turned on and pressurizing the water lines or the water is in use.



City Water Connection

If you are at a campground with a city water connection, you will not need to use the water pump (leave off) as the city water is pressurized. Please use the provided potable water hose located in the storage compartment and ensure the pressure regulator (connects directly to the camper) is connected when attaching to the camper. If you use your own hose, please ensure it is a potable water hose only and use the pressure regulator from the provided hose.

Water Heater

The camper is equipped with a 6 gallon water heater that heats with propane. Ensure the gas valves on the propane tanks are set to "Open". Turn the switch on for propane or electricity. The water heater will cycle 3 times and if it fails to light then turn the switch off, then turn back on. If issue persists, you can light manually (how to video on Easy Camper Rental's YouTube Channel)



Additional Features

Lights

All the lights in the camper will run on the battery or electricity if plugged in. There are 3 light switches located on the control panel by the camper door that will turn on the outside light and 2 different sets of inside lights. There is another light switch on the outside of the bathroom door that will light the bathroom light. All other lights are turned on/off by touching the middle of the light.

Power Outlets

The 120v power outlets in the camper will only work if a generator is running or if you are plugged into electricity.

USB Outlets

The USB outlets will work off the battery or an electrical connection.

Awning

On the control panel, there is a control switch for the exterior awning. This runs off the battery or electricity. Please do not leave the awning extended unattended, in any wind, or when not in use.



Checking the Tanks and Battery Levels

On the control panel press the button to illuminate the lights for the levels. Please note, due to debris the black and gray water tanks may not read properly. Also note, there is only 1 black and 1 gray tank but 2 buttons. Once 1 black and 1 gray tank begins to fill then that is the tank that is wired on this camper.

